



Contents

CONTUR

Conditions of use	4
Storage	4
Package opening	5
Layout guide	5
Recommended accessories	6
Installation	7

Contur

- · Demountable acoustical ceiling
- Installation in concealed T-grid
- Edge D

Conditions of use

- · For internal fitout of buildings
- To be installed in a closed-off building

Storage

The products must be:

- · Stored indoors clean and dry
- Stored at humidities of less than 70% RH and temperatures of less than 50°C
- · Positioned on a level base

- · Protected from direct moisture
- · Protected from impact and shock
- · Stacked max. 2 pallets on top of each other



Package opening



Cut the plastic wrapping by running a knife along the sides of the package. Do not cut the plactic on top of the package.




Remove the plastic wrapping.



Remove the cardboard liner around the ceiling tiles.

Layout guide

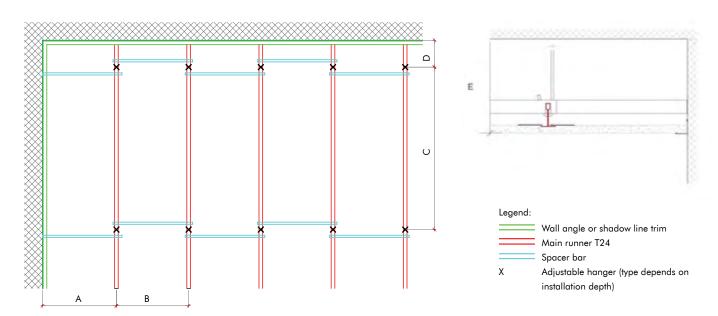


Below accessories are tested and approved for use in connection with Contur.

		PRODUCT NAME	SAP NO.	W x L x H (mm)
T-grid		Main runner T24	447854	24 x 3700 x 38
		Spacer bar	815395	600 mm
		Adjustable hanger The size specification indicates the min. and max. range	469861 469868 469872 469876 469878 469880 469881	165 - 280 315 - 580 510 - 970 630 - 1210 755 - 1460 900 - 1750 1020 - 1990
		Direct hanger	431912 316304 316302	50 80 100
		Wall angle type MIE2024	434023	20 x 3000 x 24
		Shadow line trim type MS10	772548	19+11×3000/13+19
Extra		Outside corner for wall angle	109102	
		Inside corner for wall angle	109102	
		Airfelt - Acoustic batts made of Thermo bonded polyester fiber polyethylene terephthalate, for the intended use as a backside acoustic element for increasement of absorption values.	850852	590 x 590 x 30mm
	ý .	Hold down clip	113734	
		Repair kit White paint for prepainted tiles	198956	100ml NCS 0701 Y24 R (Ral 9003)


Installation

Before installation, please ensure that fixtures to primary construction can withstand the load of the ceiling. **Best Practice:** Use of clean cotton gloves when handling product tiles will ensure a good result and a ceiling without fingermarks.

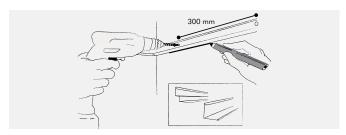


Wall angles

- Mark the location of the wall angles on the walls and columns in relation to the required ceiling height.
- Fix the wall angles at max. 300 mm c/c. Choose the fixings in accordance with the substrate.

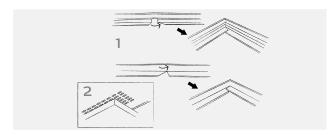


Corners

- Inside corners (1): cut the corners in a false mitre letting the ends overlap each other, unless anything to the contrary is specified.
- Outside corners (2): must always be mitred.

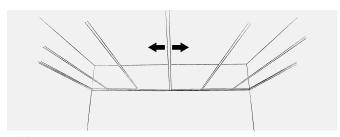


Ceiling layout

- Divide the ceiling surface from the centre of the room or in accordance with the existing ceiling plans.
- The location of light fittings and ventilation units will have an influence on ceiling layout.
- The first main runner is installed at max. 600 mm from the wall. The other main runners should be installed at 600/600 mm c/c.

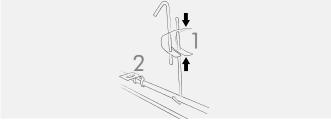


Hangers

- Fix adjustable hangers (1) with eye screws or similar securely fastened to the primary construction.
- Direct hangers (2) are secured to the ceiling using appropriate fixings in accordance with the substrate.
- Install the first hanger at max. 100 mm from the wall. The other hangers should be installed at max. 1500 mm c/c.
- If loads from light fittings etc. are to be borne by the ceiling, install additional hangers.
- Refer to distances in the ceiling layout drawing.

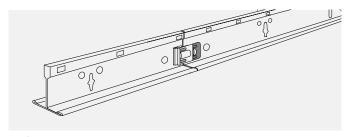


Main runners

- Install the main runners parallel to each other so that the slots are directly opposite each other.
- Join the main runners longitudinally by clicking them together.
- Adjust the lengths of the profiles with plate shears, a hacksaw or a cross-cut saw with a special blade.
- Make sure there is a hanger between the end joints of the main runners and the fire break.

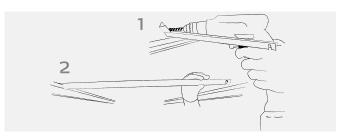


Spacer bars

- Align the first main runner along one of the walls and secure it with the help of adjusted spacer bars screwed into the wall (1).
- Install the other spacer bars (2).
- NB! When using 50 mm direct hangers, the spacer bars must be installed at the same time as the main runners (or it will not be possible to install the spacer bars).

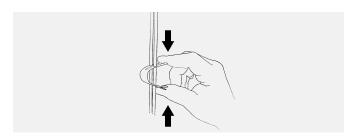


Adjustment

- Check that all profiles are correctly aligned when the entire suspension grid has been installed.
- Adjust the hangers so that they are tant and the ceiling surface is level.

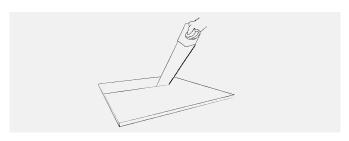


Cutting

 Cut the tiles to size from the front face with a fine-toothed saw.

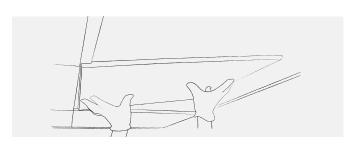

Installation

- Always wear clean cotton gloves when handling ceiling tiles.
- Install the tiles by lifting the "male" side up across the one main runner, then push the "female" side into position on the opposing main runner and lower the "male" side on the first main runner.
- Check that all metal clips are resting on the main runner.

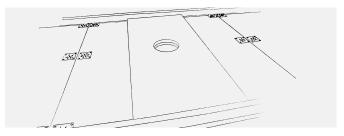

Fixtures and fittings

- With smaller units (of up to 3kg) a reinforcement tile of sufficient strength can be installed behind the Contur Plus tile.
- The reinforcement tile must extend all the way into the main runners, so that the weight is transferred to them.
- The total weight should not be greater than 3kg for each m² of ceiling. Where loads are greater than 3kg/m², additional hangers must be used.
- Units over 3kg must be installed independently, so that they do not place any load on the ceiling.

Knauf

Kløvermarksvej 6, 9500 Hobro Danmark

Phone +45 9657 3000

kundeservice-dk@knauf.com

www.knauf.dk

Build on us.